



Walk-In Coolers & Freezers

Membrane Roof Cap (Free Standing)

Carroll Coolers Inc.
19705 Hwy. 30 W.
Carroll, IA 51401
800-764-6834
Fax 712-792-6748
E-Mail: sales@carrollcoolers.com

Membrane Roof cap Installation Instructions (Free Standing)


These instructions are for installing Pro-Shield EPDM material on a walk in cooler with no parapet walls. This is a loose laid one piece installation with no roof penetrations.

Step 1: Unroll the EPDM (rubber) sheet and center in on the roof so it laps over the edge on all sides by a minimum of 3 inches. Allow the material to relax for at least 10 minutes.

Step 2: Start at one corner and fasten the termination bar one the side of the cooler a minimum of ½ inch below the roof line. The termination bar should be fastened with the angle toward the ground and kicking out from the side of the cooler. Slightly tug the rubber below the bar and shoot the screw on a slight down angle. Do not stretch the rubber.

Step 3: Continue fastening the termination bar until you reach the corner. The termination bar can either be butted at the corner, or can be bent around the corner. Tuck and fold the corner as illustrated in figure 1. Continue attaching termination bar and folding the corners until the entire roof is secured. Put a screw in every hole in the termination bar.

Step 5: Using a razor blade knife trim all of the excess rubber below the termination bar.

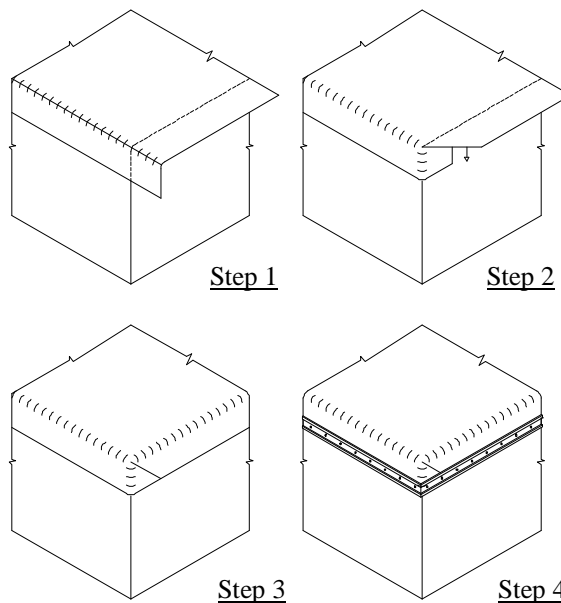

Corner Fold Detail